



VS TECHNOLOGY
MACHINE VISION OPTICS

Power Supply for LED Lighting

VCT-2460-4ES

Operation Manual

Thank you for purchasing a VST product.

To use this LED power supply with optimum performance and safety,
please read this manual thoroughly before starting operation.

Keep this manual for the whole product lifetime.

The following warning symbols are used in this manual.

Be sure to fully understand the contents.



 WARNING	A warning denotes a hazard that can cause severe injury or death.
 CAUTION	A caution denotes a hazard that can cause injury or damage of equipment.

1. For your safety

 WARNING	
	Do not open the chassis to avoid electric shock. High-voltage parts are inside.
	Use only LED lighting unit made by VS Technology (Thailand) Co., Ltd. If you use with other lighting unit, over current may cause a fire or heat.

 CAUTION	
1.	USE the extension or remote cables 3m maximum to prevent power drop by voltage reduction or malfunction by noise.
2.	Installation of the product 1) Do not put on unstable or vibrational place. 2) Do not use in environment with humidity, dusty, high temperature or fire. 3) Keep liquids away.
3.	Do not look at the LED directly. If you see the LED long time, your eyes may be damaged.
4.	Cleaning Use wet cloth twisted well. Never use inflammable liquids such as alcohol, benzene or thinner. Turn off the power and disconnect the wires from the terminal block during cleaning to avoid injury or malfunction of the unit.
5.	Dispose the product conforming to the law in the region where the product is used.
6.	Anti-static measures must be taken in advance to prevent electrostatic damage to the product.

2. General Description

VCT-2460-4ES is a controller for LED lighting unit made by VS Technology (Thailand) Co., Ltd.

Input voltage is 24 VDC for VCT-2460-4ES.

The total output power of the four channels can be up to 60 W for the VCT-2460-4ES.

Each channel can be controlled separately.

Remote control is also available separately in each channel.


3. Confirming package contents

名称	数量
Main unit	1
This operation manual	1
External trigger input Phoenix Contact (1881367) Plug terminal type connector	1


4. Specification

Model	VCT-2460-4ES
Input Voltage V_{in}	DC24V (rated) $\pm 10\%$
Power Consumption	70W
Rated output voltage	4 Channels DC24V (Between output and GND)
Rated output current	2.5A (Single channel) 2.5A (Total channel)
	Total for 4 Channel
Rated output power	60W (Single channel) 60W (Total channel)
input terminal	ML-40S1AXF-2P UL1059
Output connectors	SMP-03V-BC(JST) 1 : output+ 2 : NC 3 : output—
External control connector	RS-232C (Compliant) connector (D-Sub 9Pin) Ethernet connector (RJ45) External trigger input Phoenix Contact (1881367)
Lighting Intensity Control	INT.: Control manually by volume knobs
	EXT.: Remote control by external RS-232C (Compliant) or Ethernet (The RS-232C/Ethernet mode selection is by manual switch control)
Lighting Intensity Memory	Auto save (4 million times for each channel)
Lighting method	PWM (97.6KHz)
Overcurrent protection	Operates at 105% or higher of the rated current
Insulation resistance/withstand voltage	Between input and FG (frame ground): AC1500V /minute (10mA), DC500V 50M Ω (min.)
Operating Environment	Temperature: 0~40°C / Humidity: 20~85% RH (without condensation) Altitude: 2000m Max. Pollution level: 2
Storage Temperature/ Humidity	Temperature: -15~60°C / Humidity: 20~85% RH (without condensation)
Cooling Method	Natural air cooling
Dimensions	W156mm x D112mm x H132mm
Weight	Approx.1,000g
Environmental regulations	RoHS compliant
European Standards (CE Marking)	EN61326-1 —

5. Dimensions and Function


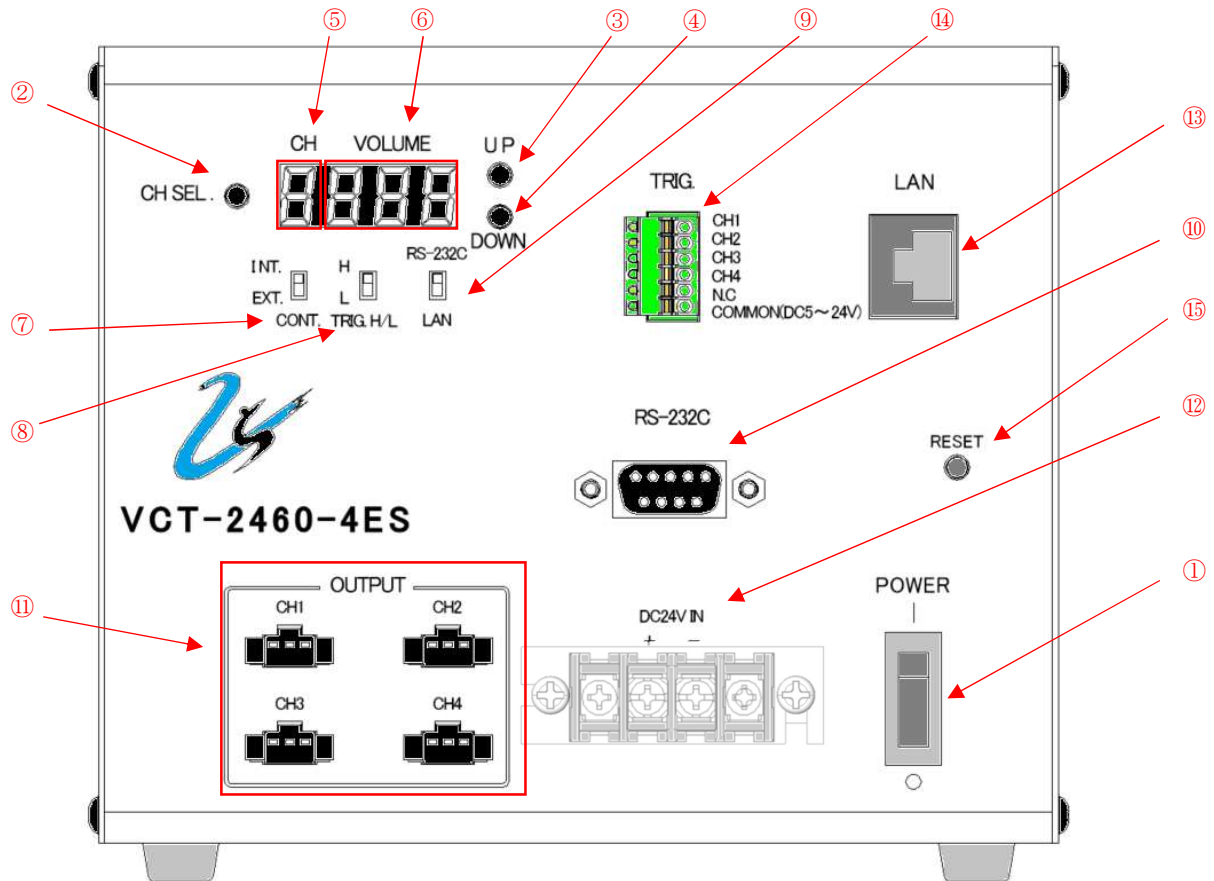


①	Power switch	Turn the power on and off.
②	Channel Selection button	Select a channel.
③	Intensity button "UP"	Lighting intensity up. Press and hold to speed up.
④	Intensity button "DOWN"	Lighting intensity down. Press and hold to speed up.
⑤	Digital display (CH)	Display channel settings. When you press the channel selection button, the number changes from 1 to 4 (CH1 to CH4).
⑥	Digital display (VOLUME)	Display of light intensity settings or light mode settings. Pressing intensity button "UP" or "DOWN" changes the 3-digit display from 0 to 255. In EXT mode, ".URT" or ".ETH" is displayed.
⑦	INT/EXT mode select switch	Select internal (INT) or external (EXT) control mode.
⑧	Trigger logic switch	Select Active H / Active L.
⑨	Communication I/F select switch	Select RS-232C / Ethernet.
⑩	External control connector (RS-232C)	RS-232C input. Refer to 7. Control by external signal
⑪	Output connectors	Lighting unit power supply.
⑫	Input terminal block	DC input connection terminal block.
⑬	External control connector (Ethernet)	Ethernet input. Refer to 7. Control by external signal
⑭	External control connector (TRIG)	The lighting unit can be operated with an external trigger input. Refer to 8. External Input Trigger .
⑮	Ethernet Reset Switch	Restore Ethernet communication to product default state.

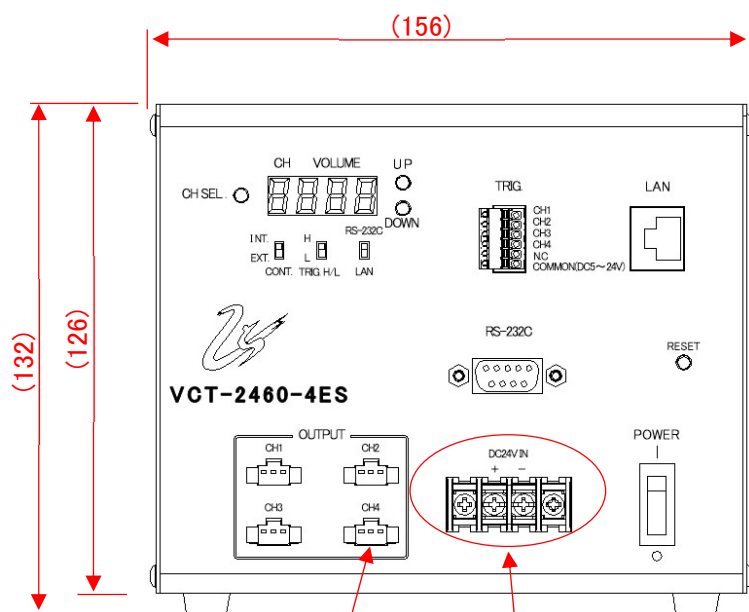


4-CONNECTOR
SMP-03V-BC

Detail A

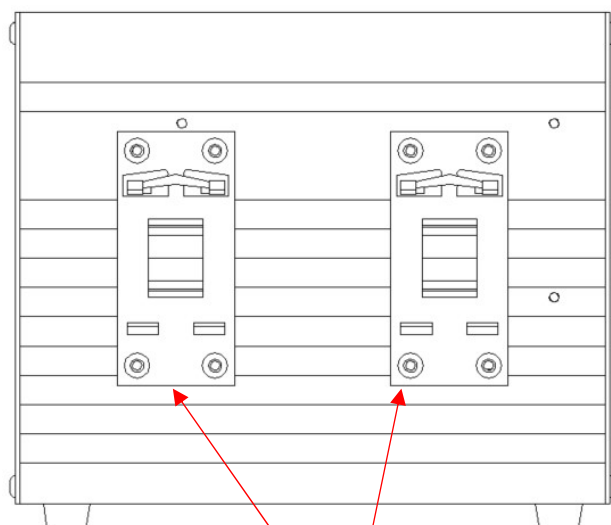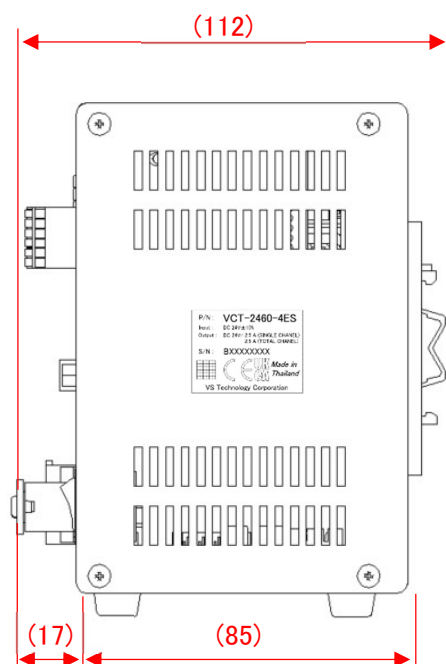

2-DIN PLATE
(DRT-1)

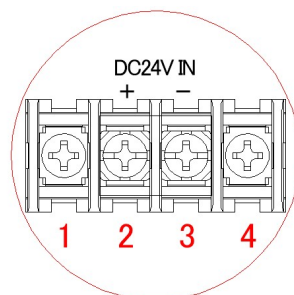

Detail A

- 1: NC
- 2: + (DC24V/2.5A)
- 3: - (DC0V)
- 4: NC

6. Operation

(1) Connections

Confirm the power switch is OFF (on "0" side).
 Connect the LED lighting unit to output connector on front panel of the product.
 Connect the DC input wire to the terminal block (ML-40S1AXF-2P).
 Recommended harness is AWG24(0.2sq).

(2) Power on

Turn the power switch to ON (on "I" side). ※Do not operate the key until the display lights up.

(3) Output channel connection

The output connector is SMP-03V-BC (JST) 1: Output + 2: NC 3: Output.

Please connect our lighting products directly.

This function does not detect the connection of the lighting unit. If the lighting unit is not connected, set the minimum output level to prevent problems.

(4) External control

(RS232C)

1. Set "INT./EXT." To the EXT side.
2. Set the communication I/F select switch to RS-232C.
3. Connect D-sub cable to external control connector (RS-232C).

(Ethernet)

1. Set "INT./EXT." To the EXT side.
2. Set the communication I/F select switch to ethernet.
3. Connect D-sub cable to external control connector (ethernet).

If you change to EXT or turn on the power with EXT, the ON / OFF setting of all channels will be turned OFF.
 For details on communication control, refer to [7. External communication control](#).

(5) External trigger (input)

Available in all modes. Connect a cable to the D-sub connector before use.
 For details, refer to [8. External Input Trigger](#).

(6) Ethernet Reset Switch

Restore Ethernet communication to product default state.

(7) Trigger logic switch(H/L)

Select Active H / Active L. Change the logic of external control.
 For details, refer to [9. Output Signal](#).

(8) Error indication

If a current exceeding the rating is detected, an error is displayed on the front panel.
 This function works regardless of "INT./EXT.". It will return when the power is off.

(9) Lighting Intensity Memory

This unit automatically memorizes the lighting intensity and is retained even when the power is turned off.
 Only the latest intensity status of each channel is remembered. It will be rewritten each time it is changed.
 Even if the memory exceeds the specification limit (4 million times for each channel), it can be used by entering the lighting intensity.

7. Control by external signal

(1) Communication specification (RS-232C)



CAUTION


Use a signal cable of 3m or less.
Do not apply voltage exceeding the rating.

connector (D-sub)

No.	Signal
2	Tx
3	Rx
5	GND

Communication protocol	RS-232C Compliance((ASCII))
Baud rate	38,400 bps
Data length	8 bits
Parity bit	None
Stop bit	1 bit

Connection example

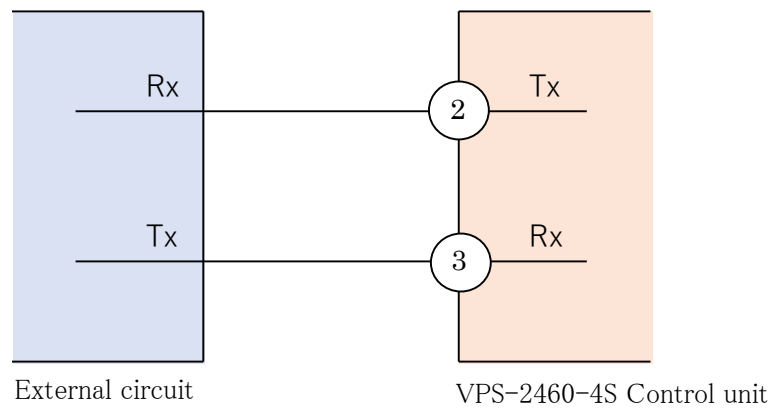

(2) Communication specification (Ethernet)

Connector (RJ45) Use a LAN cable with a length of 30m or less.

Communication specification

Initial setting value


IP address	Initial value address: 192.168.0.7 port: 20108
Network protocol	TCP/IP
Setting	TCP server ※Please use a TCP Client on the control side, such as a PC
Number of client connections	1
Setting reset	Return to initial value by reset operation

(3) Ethernet communication (Advanced Setting)


Set up the PC in the following order. For Windows 10

Initialization

1. Connect the PC and the product with a LAN cable.

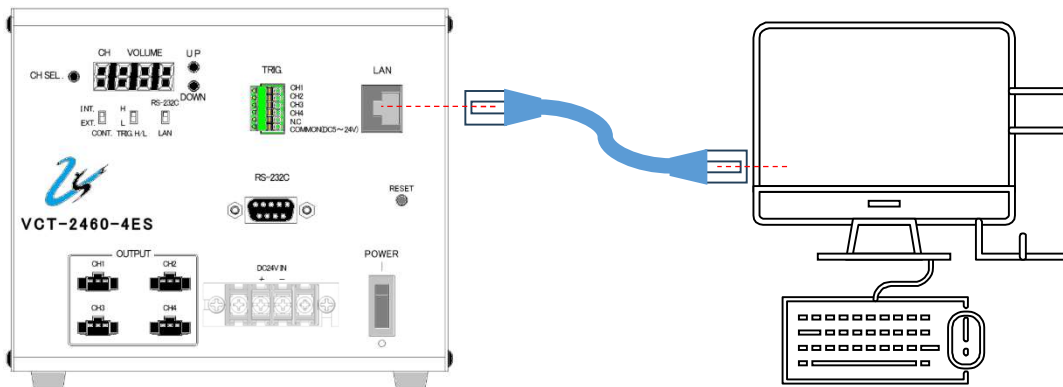

2. Click [Start] → [Windows System] → [Control Panel].
3. Click [Network and Sharing Center].
4. [Network and Sharing Center] opens. Click [Ethernet].
5. [Ethernet Status] will open. Click the [Properties] button.
6. [Ethernet Properties] will open. Select [Internet Protocol Version 4 (TCP/IPv4)] from the list and click the [Properties] button.
7. Enter an IP address between "192.168.0.1 – 192.168.0.6 or 192.168.0.8 – 192.168.0.254" in [IP Address]

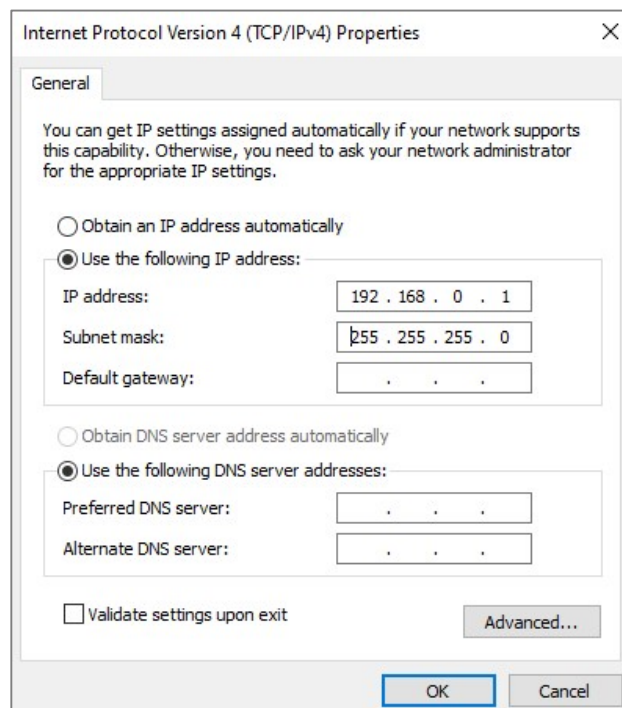

8. Launch your Internet browser and enter <http://192.168.0.7>

Login Username: admin

Password: admin

9. The following screen will start.

Select Static IP/DHCP in IP type from Local IP Config.

※Do not change settings other than Local IP Config.

parameter
IP type : Static IP ▼
Static IP : 192 . 168 . 0 . 7
Submask : 255 . 255 . 255 . 0
Gateway : 192 . 168 . 0 . 1
DNS Server : 208 . 67 . 222 . 222

Save Cancel

Help

- **IP type:** StaticIP or DHCP
- **StaticIP:** Module's static ip
- **Submask:** usually 255.255.255.0
- **Gateway:** Usually router's ip address
- **DNS IP:** DNS gateway or Router's IP

Using a fixed IP address

Set IP type to Static IP from Local IP Config.

If you use the default IP address, the following settings are not required.

When changing the IP address,

1. Select a Static IP from private addresses (class C) and enter an IP address that does not overlap with your computer.
2. Press the Save button.

parameter
IP type : Static IP ▼
Static IP : 192 . 168 . 0 . 5
Submask : 255 . 255 . 255 . 0
Gateway : 192 . 168 . 0 . 1
DNS Server : 208 . 67 . 222 . 222

Save Cancel

Help

- **IP type:** StaticIP or DHCP
- **StaticIP:** Module's static ip
- **Submask:** usually 255.255.255.0
- **Gateway:** Usually router's ip address
- **DNS IP:** DNS gateway or Router's IP

3. Please restart the browser.

- Start your Internet browser and enter the Static IP you set.

Login Username: admin Password: admin

Example of the startup screen when Static IP is set to <http://192.168.0.5>

Firmware Version : V4017		
 VS TECHNOLOGY MACHINE VISION OPTICS		
Current Status	parameter	Help
Local IP Config	Module Name : VAL-TCP232-T2	Current IP Address : default IP of module Remote IP/TX/RX : IP of server or device connecting with module;reset for disconnect TX/RX;data volume that each server or device communicates with module;reset for disconnect TX Count/RX Count : a total of data volume that servers or devices communicate with module;reset for power off
Serial Port	Current IP Address : 192.168.0.5	
Misc Config	MAC Address : d4-ad-20-59-2d-f9	
Reboot	Remote IP/TX/RX-1 : 0.0.0.0 / 0 byte / 0 byte	
	-2 : 0.0.0.0/ 0 byte / 0 byte	
	-3 : 0.0.0.0/ 0 byte / 0 byte	
	-4 : 0.0.0.0/ 0 byte / 0 byte	
	-5 : 0.0.0.0/ 0 byte / 0 byte	
	TX Count/RX Count : 0/ 0 bytes	

When using an IP address automatically obtained

- If you want the IP address to be assigned automatically, change the IP type to DHCP from Local IP Config.

Firmware Version : V4017		
 VS TECHNOLOGY MACHINE VISION OPTICS		
Current Status	parameter	Help
Local IP Config	IP type : DHCP	IP type: StaticIP or DHCP StaticIP: Module's static ip Submask: usually 255.255.255.0 Gateway: Usually router's ip address DNS IP: DNS gateway or Router's IP
Serial Port	Static IP : 192 . 168 . 0 . 7	
Misc Config	Submask : 255 . 255 . 255 . 0	
Reboot	Gateway : 192 . 168 . 0 . 1	
	DNS Server : 208 . 67 . 222 . 222	
	Save Cancel	

4. Launch your Internet browser and enter http://***.***.*.

Login Username: admin

Password: admin

※Please check and obtain the IP address by yourself.

An IP address example: <http://192.168.1.115> is shown below.

Firmware Version : V4017



VS TECHNOLOGY
Network & Cloud Solution

Current Status	parameter	Help
Local IP Config	Module Name : VAL-TCP232-T2	Current IP Address : default IP of module Remote IP/TX/RX : IP of server or device connecting with module;reset for disconnect TX/RX:data volume that each server or device communicates with module;reset for disconnect TX Count/RX Count : a total of data volume that servers or devices communicate with module;reset for power off
Serial Port	Current IP Address : 192.168.1.115	
Misc Config	MAC Address : d4-ad-20-59-2d-6c	
Reboot	Remote IP/TX/RX-1 : 0.0.0.0 / 0 byte / 0 byte	
	-2 : 0.0.0.0/ 0 byte / 0 byte	
	-3 : 0.0.0.0/ 0 byte / 0 byte	
	-4 : 0.0.0.0/ 0 byte / 0 byte	
	-5 : 0.0.0.0/ 0 byte / 0 byte	
	TX Count/RX Count : 0/ 0 bytes	

website: www.vst.co.jp

Initialize Ethernet communication settings.

In the event of an abnormality such as a communication error, or if you have forgotten the IP address, please initialize it.

While pressing the Ethernet reset switch, turn the power switch ON/OFF.

After resetting, please reconfigure from the initial settings.

(4) Command format

Transmission data(*1)

Function	Header	Channel	Transmission Command		ID	Check sum	Delimiter
			Instructions	Data(*2)			
Lighting Intensity Setting	@	00~03 See "Channel Specification"	F	000~255 (Data length:3Byte) (000:Min, 255:Max)	00	00~FF See "Check sum"	<CR><LF>
ON/OFF Setting		FF: All channels (ON/OFF Only)	L	0: OFF, 1: ON (Data length:1Byte)			
ON/OFF Setting(ALL)		FF:All channels	A	0000~1111 (Data length (*3)) 0:OFF, 1:ON			
Setting Status Check			M(*4)	-			

*1: Please send data within 4 seconds from 'header to delimiter'. If 4 seconds or more, a timeout error occurs and command data is ignored.

*2: Set all the digits in Decimal Number. If the data lengths do not match, an error occurs.

*3: Valid data length is the number of CH. The most significant bit is 1CH.

*4: The unit sends the set values for all channels after receiving the command.

*5: When sending a continuous transmission, be sure to send it after receiving the reply command.

Received data(*1)

Function	Header	Channel	Received Command				ID	Check sum	Delimiter
			OK		NG				
Command acceptance confirmation signal	@	Send back sent data	○	-	N	01 : Command Error 02 : Check sum Error	00	00~FF See "Check sum"	<CR><LF>

*1: If a timeout error occurs, or if the send data settings are out of range, there is no receive data

Function	Header	Channel(*1)	Received Command				ID	Check sum	Delimiter
			Lighting intensity		ON/OFF				
Setting Status check result	@	00~03 See "Channel Specification"	F	000~255	L	0: OFF 1: ON	00	00~FF See "Check sum"	<CR><LF>

*1: Receive commands are sent for the number of channels.

Channel Specification				
Channel	CH1	CH2	CH3	CH4
Setting value	00	01	02	03

It is an error for more than Ch number.

Check sum		Example: Set channel 2 illumination intensity to 125									
The command code is added, and the lower 2 bytes (hexadecimal number) are used as a checksum.		Header	Channel		transmissionCommand						Check sum
		Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	
	Character	@	0	1	F	1	2	5	0	0	DF

*1: Example of checksum calculation

@01L100 ⇒ 0x40+0x30+0x31+0x4C+0x31+0x30+0x30 = 0x17E

The checksum is the least significant 2Byte, so 7E.

(5) Setup steps

- Connect PC and controller with optional cable etc.
- Make sure that the main power is on.
- Set INT./EXT. Mode selector to EXT.

- Setting of lighting intensity

Specify the channel and set the lighting intensity.

Setting Example	Transmission data	Received data (OK)	Received data (Check sum NG)
Set CH3 lighting intensity to 75	@02F07500E4<CR><LF>	@0200051<CR><LF>	@02N0200B2<CR><LF>

- Lighting on / off setting

Please specify the channel and set the lighting mode.

Setting Example	Transmission data	Received data (PASS)	Received data (Command NG)
ALL CH Lighting ON	@FFL100A9<CR><LF>	@FF0007B<CR><LF>	@FFN0100DB<CR><LF>
CH2 Lighting ON	@01L1007E<CR><LF>	@0100050<CR><LF>	@01N0100B0<CR><LF>

- Lighting on / off setting(ALL)

Set the lighting mode for all channels.

Setting Example	Transmission data	Received data (PASS)	Received data (Check sum NG)
CH2・CH4 Lighting ON CH1・CH3 Lighting OFF	@FFA0101002F<CR><LF>	@FF0007B<CR><LF>	@FFN0200DC<CR><LF>

- Status check

After confirming the transmitted data, information about all channels is transmitted.

Setting Example	Transmission data	Received data (PASS)	Received data (Command NG)
Status check	@FFM0079<CR><LF>	@00F125L1005B<CR><LF>	@FFN0100DB<CR><LF>
		:	
		@FF0007B<CR><LF>	

(6) Error condition

If an error occurs, an error code is received regardless of the data sent.

Function	Header	Channel	Received Command		Check sum	Delimiter
			Error			
Common to all settings	@	FF: ALL Channel	E	1: Overcurrent detection error	00~FF See "Check sum"	<CR><LF>

To cancel the error condition, the power must be turned off.

-Error example

When an overcurrent detection error has occurred

Error example	Transmission data (*1)	Received data
Overcurrent detection error	@xxxxxx <CR><LF>	@FFE142<CR><LF>

*1: Ignore the data after @.

8. External Input Trigger

(1) External trigger input

LED lighting unit ON / OFF can be operated by external input.


Operation changes depending on the setting of trigger logic switch.

For details, refer to [9. Output Signal](#).

(2) Connector Layout

External Trigger Input Connector Plug

Connector : 1881367

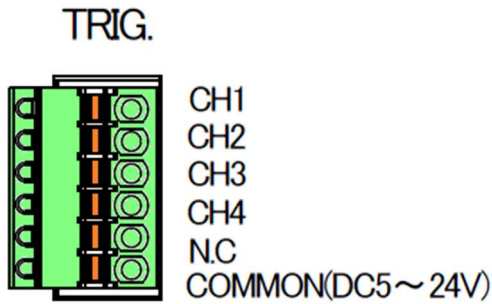

NO.	Signal
1	Lighting unit ON/OFF control inputCH1
2	Lighting unit ON/OFF control inputCH2
3	Lighting unit ON/OFF control inputCH3
4	Lighting unit ON/OFF control inputCH4
5	NC
6	Common V+ (5 to 24V)


Plug the external trigger cable directly into the connector.

○ Recommended cable specifications



Bare wire: 8mm Cable is 3m or less / AWG26 to 20

(3) Example External trigger signal connection

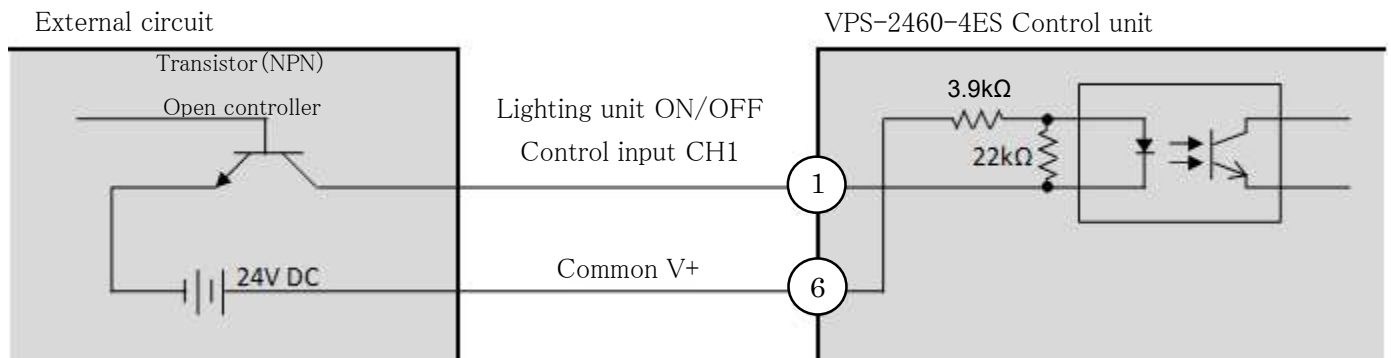


Recommended Input voltage	ON/OFF Reaction time	Input impedance
5VDC to 24 VDC	Max 10 μ s	3.9k Ω (per terminal)

(4) Trigger input timing chart

The pulse width of the ON signal needs to be 10 μ s or more. The lighting unit lights up with a delay of up to 5 μ s.

Example At trigger H input

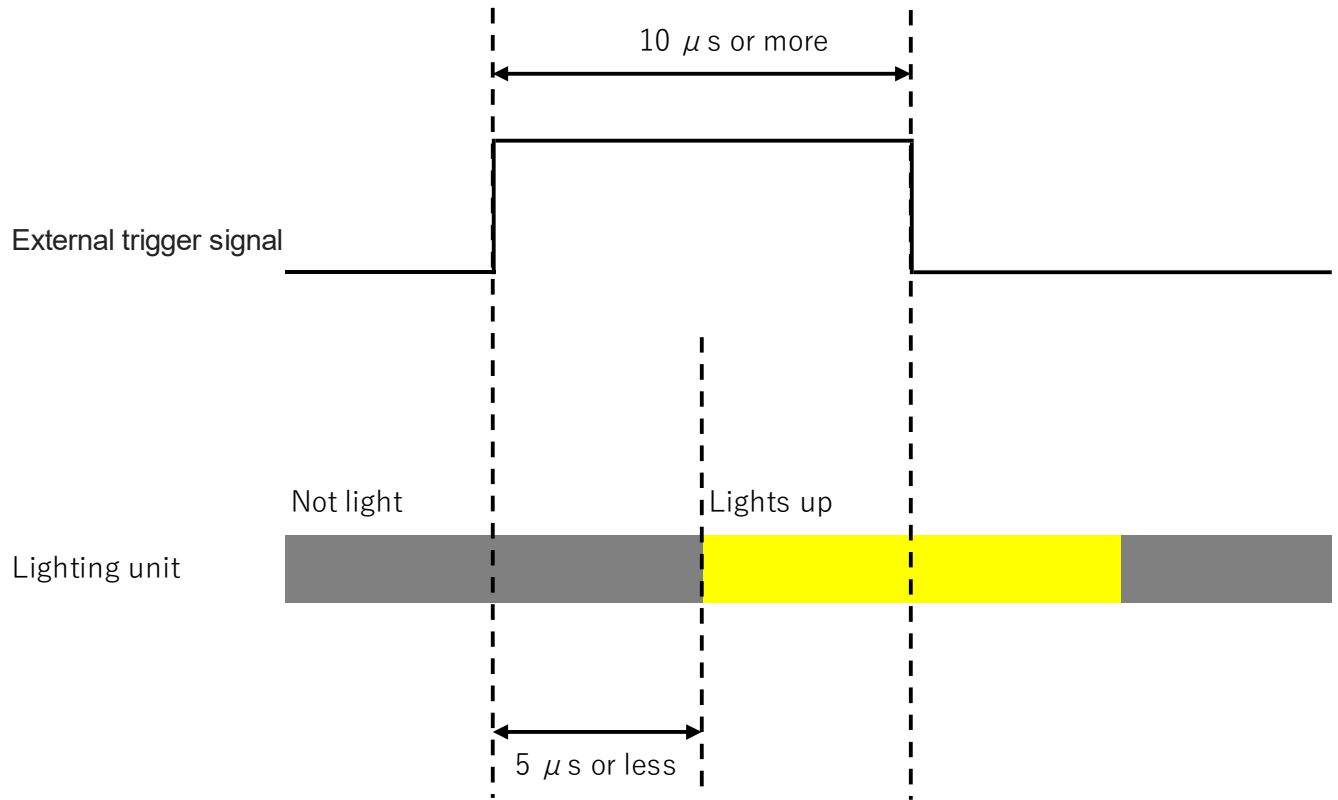

9. Output Signal

The output varies depending on the control pattern.

The external trigger sets the same potential as Common to “H” and the potential below it to “L”.

To prevent failure, do not input a voltage higher than Common to the external trigger. 0V (GND) is recommended for “L”.

(1) For external signal control (EXT)

The ON/OFF setting has the highest priority.

ON/OFF setting	Trigger logic switch	External trigger(6 to 9pin)	Output signal
ON	H	H/Open	LED lighting unit ON
		L	LED lighting unit OFF
	L	H/Open	LED lighting unit OFF
		L	LED lighting unit ON
OFF	–	–	LED lighting unit OFF

(2) When not using external signal control (INT)

Trigger logic switch	External trigger(6 to 9pin)	Output signal
H	H/Open	LED lighting unit ON
	L	LED lighting unit OFF
L	H/Open	LED lighting unit OFF
	L	LED lighting unit ON

(3) When external signal control is not used and no external trigger is connected (INT)

Trigger logic switch	Output signal
H	LED lighting unit ON
L	LED lighting unit OFF

10. Environmental regulations

(1) EU RoHS

Laws and regulations (EU Directive 2011/65 / EU) have been enforced that prohibit or restrict the use of six hazardous substances in sales and distribution within the European Union (EU).

The six hazardous substances are Lead、Mercury、Cadmium、Hexavalent Chromium、Polybrominated biphenyl(PBB)、Polybrominated diphenyl ether (PBDE).

European RoHS added four phthalic acid substances on July 22, 2019.

The four additional substances refer to four phthalate esters (DEHP, BBP, DBP, DIBP).

Lead (PB)	Mercury (HG)	Cadmium (Cd)	Hexavalent Chromium (Cr VI)	PBB	PBDE	DEHP	BBP	DBP	DIBP
1000ppm Max	1000ppm Max	100ppm Max	1000ppm Max	1000ppm Max	1000ppm Max	1000ppm Max	1000ppm Max	1000ppm Max	1000ppm Max

(2) China RoHS

China RoHS directive is formally known as “Management Methods for Controlling Pollution by Electronic Information Products”, which was implemented on March 1st, 2007 in China.

After that, the Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products is hereby released, and comes into effect from the date of July 1st, 2016.

China RoHS restricts the same six substances as EU RoHS.

To clearly disclose contents of the 6 restricted substances listed below.

Usage deadline for environmental protection	Product name	Lead(*1) (PB)	Mercury (HG)	Cadmium (Cd)	Hexavalent Chromium (Cr VI)	PBB	PBDE
	Power Supply for LED Illumination	×	○	○	○	○	○

○: The amount of this toxic or hazardous substances contained in all of the homogeneous materials for this product is below the limit requirements in the China National Standard GB/T 26572-2011.

×: The amount of this toxic or hazardous substances contained in at least one of the homogeneous materials used of this product is above the limit requirements in the China National Standard GB/T 26572-2011.

*1: Lead is excluded in EU RoHS.

11.Optional Accessories

12.Warranty

For VS Technology LED Lighting products only.

Warranty	(1) Warranty Period The warranty period for power supplies and controllers is one year from the date of delivery. The warranty period for LED lighting products is two years from the date of product delivery. However, the warranty for LED irradiance and illuminance is one year. (at least 50% of the final inspection value before shipment.)
(2) Warranty coverage In the unlikely event of a defect or malfunction arising from the product itself under normal use within the warranty period, VS Technology Co., Ltd. will, in good faith, replace or repair the defective parts free of charge. However, the following malfunctions are not covered by the warranty, even within the warranty period. ○ Malfunction or damage caused by conditions, environment, handling, or use of the product other than those described in the instruction manual and specifications. ○ Defects or damages caused by changes in structure, performance, specifications, etc. made by the customer after the date of delivery of the product. ○ Defects or damage caused by use of the product for purposes other than those for which it was designed. ○ Malfunctions and damage caused by salt wind, gas, earthquake, flood, fire, lightning, collision, or other natural or human-caused damage and malfunctions. (3) Abandonment VS Technology Co., Ltd. shall not be liable for incidental damages (e.g., business related expenses, business interruption). 《NOTICE》 If you have any questions or concerns, please do not hesitate to contact VS Technology Co., Ltd. For repair or after-sales service, please contact the VS Technology Co., Ltd. office or the sales representative where you purchased the product. When requesting service, please provide us with the following information.	

Please feel free to contact us if you have any question.

Model Name

Serial No.:

Date of purchase:

State of trouble: Please provide detailed information

Your name, address, telephone number, email-address



VS TECHNOLOGY
MACHINE VISION OPTICS